



## Tempo Configuration

A Theia Tempo is a battery backup time keeper

If using zones, all time commands will be sent to all zones in a single connected group. If you are only using the Tempo (or Echo) for time keeping, only a single unit is needed per group.

To configure, plug the tempo into the supplied USB block. The Tempo comes in Group 1 - Zone 00.

The first time connecting, navigate to the tray (3 green lines, top left corner) - configuration and time sync. Push the SYNC NOW, and turn on "Auto Synch". You have now set the time in your device to the current group and it will auto update any time you connect via the app.

Configure the tempo up to the group level (Security and Group Setting). There is no need to put it into any specific zone. The Tempo can be in any zone and will still send out time keeping to all lights in all zones.



Please see the diagram below for a single group layout using a Tempo.

